



Part #90100 - Wheel Rim Screws  
INSTALLATION INSTRUCTIONS

Prevents racing tires from spinning on rim under hard acceleration

PARTS LIST

35 - Wheel Rim Screws

1. Mark and centerpunch eight locations evenly spaced around the outer flange of rim so screws will penetrate into tire bead.
2. Drill holes using 13/64" bit, leaving enough room to edge of rim to accommodate 3/8" socket.
3. Deburr holes, mount tires and inflate to 25 psi.
4. Use 3/8" socket to install screws through rim and into tire bead; inflate tire to normal operating pressure.

**NOTE: Snug fit only to avoid snapping off screw head.**